

WARNING!

Some applications have electrical transients that can damage the EGS21 gage and leave no apparent sign of failure. To prevent this failure mode from affecting other systems, attach enclosed suppression extension harness directly to the gage, between the gage and the system harness.

NOTICE

The EG21 and EGS21 series Swichgage® requires 12VDC to operate. To support 24VDC and 32VDC systems, the harness is specifically designed to convert the supply voltage to 12VDC to operate the gage.

Refer to document (included)
00-02-0251 EG21 & EGS21 Series
Electric Gage and Swichgage®
Installation. The latest version can be
found at www.fwmurphy.com

00-02-0648
6/25/08